



## 电源维护期间群集交换机重启

[https://kb-cn-stage.netapp.com/on-prem/ontap/OHW/OHW-KBs/Cluster\\_switch\\_reboot\\_during\\_power\\_...](https://kb-cn-stage.netapp.com/on-prem/ontap/OHW/OHW-KBs/Cluster_switch_reboot_during_power_...)

Updated: Wed, 22 Apr 2026 07:32:28 GMT

### 适用于

- ONTAP 9
- Cisco 集群交换机

### 问题描述

- 集群交换机重新启动
- 集群交换机呼叫断电

```
Jan 1 11:11:11 0.0.0.0-1 SIM[Cnfrg_Thread_]: sim_util.c(4302) 11 %% ALRT Switch was reset due to power disruption or unexpected restart.(error[0x0]).
```

- 集群节点可能会遇到 CLAM 崩溃