



正在输入FM状态：5、因为mbFound：0解析指南

https://kb-cn-stage.netapp.com/on-prem/ontap/OHW/OHW-KBs/Entering_FM_state_5_because_mbFo...

Updated: Wed, 22 Apr 2026 08:48:10 GMT

适用场景

- ONTAP 9
- AFF 型号
- FAS 型号
- Cloud Volumes ONTAP (CVO)
- MetroCluster

问题描述

在启动过程中、节点的邮箱磁盘无法访问。

ONTAP 将报告：

- `Entering FM state:5 because mbFound:0 local in headswap:0`
- `Waiting for giveback...(Press Ctrl-C to abort wait)Entering FM state:5 because`

'NetApp provides no representations or warranties regarding the accuracy or reliability or serviceability of any information or recommendations provided in this publication or with respect to any results that may be obtained by the use of the information or observance of any recommendations provided herein. The information in this document is distributed AS IS and the use of this information or the implementation of any recommendations or techniques herein is a customers responsibility and depends on the customers ability to evaluate and integrate them into the customers operational environment. This document and the information

```
mbFound:0 local in headswap:0
```

按照本指南帮助您找到问题或问题描述 的解决方案。