



---

## FAS2554 警示 LED 亮起

[https://kb-cn-stage.netapp.com/on-prem/ontap/OHW/OHW-KBs/FAS2554\\_attention\\_LED\\_ON](https://kb-cn-stage.netapp.com/on-prem/ontap/OHW/OHW-KBs/FAS2554_attention_LED_ON)

Updated: Wed, 22 Apr 2026 07:00:24 GMT

### 适用场景

- FAS2554
- 7-模式 Data ONTAP
- 服务处理器（SP）固件 2.2.5P2

### 问题描述

- 控制器警示 LED 亮起
- ONTAP 命令 `storage show fault -v` 会报告状态正常，但所有 PSU 均具有 DC UNDER VOLTAGE

```
node_name> storage show fault -v
```

```
Enclosure Status: normal
```

```
Channel: 0a
```

```
Shelf: 0
```

---

'NetApp provides no representations or warranties regarding the accuracy or reliability or serviceability of any information or recommendations provided in this publication or with respect to any results that may be obtained by the use of the information or observance of any recommendations provided herein. The information in this document is distributed AS IS and the use of this information or the implementation of any recommendations or techniques herein is a customers responsibility and depends on the customers ability to evaluate and integrate them into the customers operational environment. This document and the information

Shelf Type: DS4246

Product Serial Number: serial\_number

Module Type: IOM6E

Power Supplies:

Element	Status	Status Bytes	Status Descriptions
1:	OK	01,00,04,A0	DC UNDER VOLTAGE, RQSTED ON
2:	OK	01,00,04,A0	DC UNDER VOLTAGE, RQSTED ON
3:	OK	01,00,04,A0	DC UNDER VOLTAGE, RQSTED ON
4:	OK	01,00,04,A0	DC UNDER VOLTAGE, RQSTED ON