



NVRAM M2 传感器高温警告

https://kb-cn-stage.netapp.com/on-prem/ontap/OHW/OHW-KBs/High_Temperature_Warning_on_NVR...

Updated: Wed, 22 Apr 2026 04:08:11 GMT

适用于

- AFF A90
- NVRAM M2 温度传感器

问题描述

- NVRAM M2 模块的几个高温警告。示例：

```
... node_name: ALERT monitor.chassisTemperature.warm: Chassis temperature is
too warm: NVRAM M2 Temp is warning high (67C).
... node_name: env_mgr: monitor.chassisTemperature.warm: alert: Chassis
temperature is too warm: NVRAM M2 Temp is warning high (67C).
... node_name: env_mgr: callhome.chassis.hitemp: error: Call home for CHASSIS
OVERTEMPERATURE
... node_name: monitor: monitor.globalStatus.critical: EMERGENCY: Chassis
```

'NetApp provides no representations or warranties regarding the accuracy or reliability or serviceability of any information or recommendations provided in this publication or with respect to any results that may be obtained by the use of the information or observance of any recommendations provided herein. The information in this document is distributed AS IS and the use of this information or the implementation of any recommendations or techniques herein is a customers responsibility and depends on the customers ability to evaluate and integrate them into the customers operational environment. This document and the information

temperature is too high.

- 该模块或控制器中任何其他 IO 扩展卡的所有其他温度传感器都是相关的（当数据中心温度或气流变化时增加/减少）