



## 如何在更换之前确定故障磁盘

[https://kb-cn-stage.netapp.com/on-prem/ontap/OHW/OHW-KBs/How\\_to\\_identify\\_a\\_failed\\_disk\\_prior\\_t...](https://kb-cn-stage.netapp.com/on-prem/ontap/OHW/OHW-KBs/How_to_identify_a_failed_disk_prior_t...)

Updated: Wed, 22 Apr 2026 08:25:35 GMT

### 适用场景

ONTAP 9

### 描述

本文介绍如何在ONTAP中确定磁盘驱动器是否损坏或出现故障、而不管警示(琥珀色)LED是否亮起。

### 操作步骤

#### 在ONTAP 9.8及更高版本中使用System Manager

1. 在菜单中、导航到**cluster | Disks**。
2. 在**磁盘**选项卡中，按**容器类型**列筛选已损坏。
3. **名称**列用于标识<stack-id><shelf><bay>格式的磁盘路径名称。

'NetApp provides no representations or warranties regarding the accuracy or reliability or serviceability of any information or recommendations provided in this publication or with respect to any results that may be obtained by the use of the information or observance of any recommendations provided herein. The information in this document is distributed AS IS and the use of this information or the implementation of any recommendations or techniques herein is a customers responsibility and depends on the customers ability to evaluate and integrate them into the customers operational environment. This document and the information

## 使用ONTAP命令行界面

按照“[Remove a failed disk \(删除故障磁盘\)](#)”中的操作步骤进行操作。

## 视频演示

媒体、内嵌框架、嵌入标签和对象标签在PDF文件内部不支持。

### 追加信息

- [storage disk set-led](#) 命令
- [如何使用HWU根据磁盘ID确定故障磁盘位置](#)
- [ONTAP硬件系统的驱动器架](#)