



如何擦除SP/BMC

https://kb-cn-stage.netapp.com/on-prem/ontap/OHW/OHW-KBs/How_to_wipe_the_SP_BMC

Updated: Wed, 22 Apr 2026 04:02:22 GMT

适用场景

- AFF系统
- ASA系统
- FAS系统

问题描述

擦除SP/BMC的步骤

'NetApp provides no representations or warranties regarding the accuracy or reliability or serviceability of any information or recommendations provided in this publication or with respect to any results that may be obtained by the use of the information or observance of any recommendations provided herein. The information in this document is distributed AS IS and the use of this information or the implementation of any recommendations or techniques herein is a customers responsibility and depends on the customers ability to evaluate and integrate them into the customers operational environment. This document and the information