



现场电源测试后，内部机架显示中板 VPD 故障

https://kb-cn-stage.netapp.com/on-prem/ontap/OHW/OHW-KBs/Internal_Shelf_shows_Midplane_VPD_...

Updated: Wed, 22 Apr 2026 08:48:37 GMT

适用场景

- AFF A90
- FS4483NSM16E
- ONTAP 9

问题描述

货架显示非严重故障 `storage show fault` 电力维护后

```
Enclosure Status: non-critical Channel: 0s Shelf: 0 Shelf Type: FS4483NSM16E  
Module Type: NSM16E
```

```
PSM: Element Status Status Bytes Status Descriptions 1 [NSM16E A] :  
NONCRITICAL 03,04,00,00 MIDPLANE VPD FAULT 2 [NSM16E B] : OK 01,08,00,00 MASTER
```

'NetApp provides no representations or warranties regarding the accuracy or reliability or serviceability of any information or recommendations provided in this publication or with respect to any results that may be obtained by the use of the information or observance of any recommendations provided herein. The information in this document is distributed AS IS and the use of this information or the implementation of any recommendations or techniques herein is a customers responsibility and depends on the customers ability to evaluate and integrate them into the customers operational environment. This document and the information