



IO端口温度传感器不可读

https://kb-cn-stage.netapp.com/on-prem/ontap/OHW/OHW-KBs/IO_port_temperature_sensor_is_nonre...

Updated: Wed, 22 Apr 2026 07:29:06 GMT

适用场景

- AFF A70
- AFF A90

问题描述

- 从SP日志中可以看到某些IO端口不可读：

Sensor Name	State	Current	Critical	Warning
Warning	Critical	Reading	Low	Low
High	High			
IO1 Status	normal	57	--	--
IO1 100G CX6 Temp	normal	50 C	0 C	5 C
C 105 C				100

'NetApp provides no representations or warranties regarding the accuracy or reliability or serviceability of any information or recommendations provided in this publication or with respect to any results that may be obtained by the use of the information or observance of any recommendations provided herein. The information in this document is distributed AS IS and the use of this information or the implementation of any recommendations or techniques herein is a customers responsibility and depends on the customers ability to evaluate and integrate them into the customers operational environment. This document and the information

IO1 100G P1 Temp	normal	35 C	-5 C	-1 C	70
C	75 C				
IO1 100G P2 Temp	nonreadable	-- C	-5 C	-1 C	70
C	75 C				

- 未使用带有不可读温度传感器的端口：

slot 1: Dual 40G/100G Ethernet Controller CX6-DX

e1a MAC Address: d0:39:ea:c0:1b:bc (auto-100g_sr4-fd-up)

QSFP Vendor: FINISAR CORP

QSFP Part Number: FTLC9558REPM-1Y

QSFP Serial Number: XXXXXX

e1b MAC Address: d0:39:ea:c0:1b:bd (auto-unknown-fd-down)

QSFP Vendor:

QSFP Part Number:

QSFP Serial Number: