



# CXone Mpower EXPERT

## 运行 `boot_ontap` 时，节点将启动至维护模式

[https://kb-cn-stage.netapp.com/on-prem/ontap/OHW/OHW-KBs/Node\\_boots\\_to\\_maintenance\\_mode\\_...](https://kb-cn-stage.netapp.com/on-prem/ontap/OHW/OHW-KBs/Node_boots_to_maintenance_mode_...)

Updated: Wed, 22 Apr 2026 11:49:15 GMT

### 适用场景

- ONTAP 9
- Data ONTAP 8

### 问题描述

- `boot_ontap` 从加载程序提示符运行时、节点始终会启动到维护模式。
- 此时将显示以下消息：

```
NOTE: You have chosen to boot the diagnostics kernel.  
The system has booted in maintenance mode allowing the  
Use the 'sldiag' command in order to run diagnostics on the system.
```