



单个PSU传感器显示不可用

https://kb-cn-stage.netapp.com/on-prem/ontap/OHW/OHW-KBs/Single_PSU_sensors_shows_not_avail...

Updated: Wed, 22 Apr 2026 10:27:28 GMT

适用场景

- FAS 9000
- ONTAP 9

问题描述

- 其中一个PSU的传感器全部显示为不可用、尽管此PSU正在工作

```
cluster::> system environment sensors show -node * -state not-available
Node Sensor State Value/Units Crit-Low Warn-Low Warn-Hi Crit-Hi
```

```
-----
```

```
bdnetapp30d
```

```
PSU4 AC In Volt
```

```
not-available
```

```
- mV 88000 90000 - 255000
```

'NetApp provides no representations or warranties regarding the accuracy or reliability or serviceability of any information or recommendations provided in this publication or with respect to any results that may be obtained by the use of the information or observance of any recommendations provided herein. The information in this document is distributed AS IS and the use of this information or the implementation of any recommendations or techniques herein is a customers responsibility and depends on the customers ability to evaluate and integrate them into the customers operational environment. This document and the information

```
PSU4 AC In Curr
not-available
- mA - - 14000 14980
PSU4 12V Out Volt
not-available
- mV 10980 11400 12900 13500
PSU4 12V Out Curr
not-available
- mA 0 - 140000 144000
4 entries were displayed.
```

- 更换PSU不起作用
- SP重新启动不起作用