



SP show命令用于指示IP地址后面的特殊字符

https://kb-cn-stage.netapp.com/on-prem/ontap/OHW/OHW-KBs/SP_show_command_indicates_special...

Updated: Wed, 22 Apr 2026 07:31:31 GMT

适用场景

- AFF C250
- BMC 15.11

问题描述

服务处理器(SP) show命令指示IP地址后面的特殊字符

```
Cluster::> sp show
```

Node	Type	Status	IP Configured	Firmware Version	IP Address
node_name_01	BMC	online	true	15.11	xx.xx.xx.xx
node_name_02	BMC	online	true	15.11	xx.xx.xx.xx,

```
:: <-----
```

'NetApp provides no representations or warranties regarding the accuracy or reliability or serviceability of any information or recommendations provided in this publication or with respect to any results that may be obtained by the use of the information or observance of any recommendations provided herein. The information in this document is distributed AS IS and the use of this information or the implementation of any recommendations or techniques herein is a customers responsibility and depends on the customers ability to evaluate and integrate them into the customers operational environment. This document and the information

2 entries were displayed.