



NiCE

FAS2650和AFF A200上的温度传感器警告

https://kb-cn-stage.netapp.com/on-prem/ontap/OHW/OHW-KBs/Temperature_Sensor_Warning_on_FA...

Updated: Wed, 10 Jun 2026 19:18:49 GMT

适用场景

- FAS2650
- FAS2620
- AFF A200
- ONTAP 9
- 服务处理器 (SP)

问题描述

- 磁盘架报告温度传感器温度过高。
- EMS 日志显示以下错误。

示例：

```
Node1: dsa_worker3: ses.status.temperatureError:error]: DS224-12 (S/N SHFxxx) shelf 0 on channel 0b temperature error for Temperature sensor 11: critical status; overtemperature failure. Current temperature: 173 C (343 F). This module is on the rear of the shelf at the top left, on shelf
```

'NetApp provides no representations or warranties regarding the accuracy or reliability or serviceability of any information or recommendations provided in this publication or with respect to any results that may be obtained by the use of the information or observance of any recommendations provided herein. The information in this document is distributed AS IS and the use of this information or the implementation of any recommendations or techniques herein is a customers responsibility and depends on the customers ability to evaluate and integrate them into the customers operational environment. This document and the information

module A.

```
[ses.status.temperatureWarning:alert]: DS224-12 (S/N *****) shelf 0  
on channel 0b temperature warning for Temperature sensor 11: non-critical  
status. Current temperature: 0 C (32 F). \220\226m\204 .
```