



## 无法从ONTAP集群Shell查看备份BMC固件版本

[https://kb-cn-stage.netapp.com/on-prem/ontap/OHW/OHW-KBs/Unable\\_to\\_see\\_backup\\_BMC\\_firmwar...](https://kb-cn-stage.netapp.com/on-prem/ontap/OHW/OHW-KBs/Unable_to_see_backup_BMC_firmwar...)

Updated: Wed, 22 Apr 2026 08:47:57 GMT

### 适用场景

- AFF A400 、AFF C400
- ASA A400 、ASA C400
- FAS8300 、FAS8700

### 问题描述

`system service-processor image show` 和 `system service-processor image show -instance` 命令不会显示某些系统上的备份BMC固件版本。

示例：

```
cluster1::*> system service-processor image show
```

```
Is
```

```
Node          Type  Image      Status    Current Version
```

'NetApp provides no representations or warranties regarding the accuracy or reliability or serviceability of any information or recommendations provided in this publication or with respect to any results that may be obtained by the use of the information or observance of any recommendations provided herein. The information in this document is distributed AS IS and the use of this information or the implementation of any recommendations or techniques herein is a customers responsibility and depends on the customers ability to evaluate and integrate them into the customers operational environment. This document and the information

```
-----  
cluster1-1a      BMC  
    primary installed  true  15.12  
    backup  installed  false  15.11  
cluster1-1b      BMC  
    primary installed  true  15.12  
    backup  installed  false  15.11  
cluster1-2a      BMC  
    primary installed  true  13.11P1  
cluster1-2b      BMC  
    primary installed  true  13.11P1  
7 entries were displayed.
```