



AutoSupport 消息：NVRAM 设备状态警报

https://kb-cn-stage.netapp.com/on-prem/SolidFire/Element_OS_Kbs/AutoSupport_Message__NVRAM...

Updated: Wed, 22 Apr 2026 04:08:09 GMT

适用场景

- NetApp Element软件
- NetApp SF系列
- NetApp H系列

问题描述

NetApp SolidFire Active IQ中的警报：

nodeHardwareFault

错误文本示例：

```
SFVRMW:SolidFire Alert from <cluster> (NVRAM Device Status) NVRAM device  
warning={Device: 0x1000004 Key: energySourceTemperatureStatus Device: 0x1000004 CurT
```

'NetApp provides no representations or warranties regarding the accuracy or reliability or serviceability of any information or recommendations provided in this publication or with respect to any results that may be obtained by the use of the information or observance of any recommendations provided herein. The information in this document is distributed AS IS and the use of this information or the implementation of any recommendations or techniques herein is a customers responsibility and depends on the customers ability to evaluate and integrate them into the customers operational environment. This document and the information

SFVRMW:SolidFire Alert from <cluster> (NVRAM Device Status) NVRAM device warning={fanInletAmbientTemperature: XX.XX C}

SFVRMW:SolidFire Alert from <cluster> (NVRAM Device Status) NVRAM device warning={enterpriseFlashControllerTemperature: XX C}

SFVRMW:SolidFire Alert from <cluster> (NVRAM Device Status) NVRAM device warning={capacitor1And2Temperature: XX.XXC}