



---

## 主机名和集群在ActiveIQ中显示为相同值

[https://kb-cn-stage.netapp.com/on-prem/SolidFire/Element\\_OS\\_Kbs/Hostname\\_and\\_Cluster\\_showing\\_...](https://kb-cn-stage.netapp.com/on-prem/SolidFire/Element_OS_Kbs/Hostname_and_Cluster_showing_...)

Updated: Wed, 22 Apr 2026 08:49:38 GMT

### 适用场景

NetApp SolidFire Active IQ (AIQ)

### 问题描述

主机名显示的值与 AIQ 中的集群名称相同