



UCS 刀片式服务器正在断开与存储适配器的连接

https://kb-cn-stage.netapp.com/on-prem/SolidFire/Element_OS_Kbs/UCS_blades_disconnecting_from...

Updated: Wed, 22 Apr 2026 07:30:18 GMT

适用于

- NetApp Element 软件
- Cisco UCS 刀片式服务器从 LUN 启动

问题

- 在操作期间，UCS 会显示以下错误 刀片式服务器

```
Ics106028169 login: [1B815.Z3Y976] blk_update_request : I/O error, dev dm-0, sector 46369000
[10815.240477] blk_update_request : I/O error, dev dm-0, sector 46369000
[10843.248168] blk_update_request : I/O error, dev dm-0, sector 0
[10843.248722] blk_update_request : I/O error, dev dm-0, sector 0
[10843.249227] blk_update_request : I/O error, dev dm-0, sector 38599488
[10843.249679] XFS (dm-5): metadata I/O error: block 0x804b40 ("xlog_iodone") error 5 numblks 64
[10843.250149] XFS (dm-5): Log I/O Error Detected. Shutting down filesystem
```

'NetApp provides no representations or warranties regarding the accuracy or reliability or serviceability of any information or recommendations provided in this publication or with respect to any results that may be obtained by the use of the information or observance of any recommendations provided herein. The information in this document is distributed AS IS and the use of this information or the implementation of any recommendations or techniques herein is a customers responsibility and depends on the customers ability to evaluate and integrate them into the customers operational environment. This document and the information

[10843.250585] XFS (dm-5): Please unmount the filesystem and rectify the problems

- 重新启动 UCS 刀片式服务器时，开机自检期间出现以下错误，并且未进一步启动

initialize error 1