



---

## BMC UI无响应

[https://kb-cn-stage.netapp.com/on-prem/SolidFire/hardware\\_Kbs/BMC\\_UI\\_not\\_responding](https://kb-cn-stage.netapp.com/on-prem/SolidFire/hardware_Kbs/BMC_UI_not_responding)

Updated: Wed, 22 Apr 2026 03:53:55 GMT

### 适用场景

- 底板管理控制器（BMC）
- NetApp SolidFire SF 系列节点
- NetApp H-Series

### 问题描述

BMC UI未加载—BMC IP仍可通过访问 `ping`