



如何清除Element上的琥珀色闪烁指示灯

https://kb-cn-stage.netapp.com/on-prem/SolidFire/hardware_Kbs/How_to_clear_the_amber_blinking_li...

Updated: Wed, 22 Apr 2026 07:31:15 GMT

执行

执行

适用场景

- NetApp Element软件
- NetApp SF系列
- NetApp H系列

问题描述

底层(已解决) BMC警报可能仍会在系统上触发警告LED。只要未清除系统事件列表(SEL)、警告LED就会保持激活状态。本文将介绍如何从SEL/IPMI中清除BMC。

注：并非所有指示灯错误都可以通过清除SEL来解决。请参阅 [追加信息](#) 了解可能需要的进一步步骤/调查。

'NetApp provides no representations or warranties regarding the accuracy or reliability or serviceability of any information or recommendations provided in this publication or with respect to any results that may be obtained by the use of the information or observance of any recommendations provided herein. The information in this document is distributed AS IS and the use of this information or the implementation of any recommendations or techniques herein is a customers responsibility and depends on the customers ability to evaluate and integrate them into the customers operational environment. This document and the information

