



# NiCE

---

## 如何在iDRAC接口上启用VLAN

[https://kb-cn-stage.netapp.com/on-prem/SolidFire/hardware\\_Kbs/How\\_to\\_enable\\_VLANs\\_on\\_the\\_iDR...](https://kb-cn-stage.netapp.com/on-prem/SolidFire/hardware_Kbs/How_to_enable_VLANs_on_the_iDR...)

Updated: Thu, 04 Jun 2026 05:24:17 GMT

### 适用场景

- NetApp Element 软件
- NetApp SolidFire SF 系列节点

### 问题描述

如何在 iDRAC 接口上启用 VLAN