



如何在网页拒绝访问时重新启动iDRAC

https://kb-cn-stage.netapp.com/on-prem/SolidFire/hardware_Kbs/How_to_reboot_a_iDRAC_when_we...

Updated: Wed, 22 Apr 2026 07:32:35 GMT

适用场景

- NetApp Element 软件
- NetApp SolidFire SF 系列节点

问题描述

如何在网页拒绝访问时重新启动iDRAC