



如何启用LLDP

https://kb-cn-stage.netapp.com/on-prem/ontap/da/NAS/NAS-KBs/How_to_enable_LLDP

Updated: Wed, 22 Apr 2026 07:13:22 GMT

适用场景

ONTAP 9

问题描述

已在此ONTAP节点上禁用LDP。