



---

## 无法卸载 DP 卷

[https://kb-cn-stage.netapp.com/on-prem/ontap/da/NAS/NAS-KBs/Unable\\_to\\_unmount\\_DP\\_volume](https://kb-cn-stage.netapp.com/on-prem/ontap/da/NAS/NAS-KBs/Unable_to_unmount_DP_volume)

Updated: Wed, 22 Apr 2026 13:03:16 GMT

### 适用于

- ONTAP 9.10.1
- DP 卷

### 问题描述

卷卸载失败，并显示以下错误

■ Error: Failed to delete junction from volume vol0000 on Vserver svm\_0000. Reason: Junction destroy failed (30).