



---

## 移动卷后、聚合仍会显示空间使用量

[https://kb-cn-stage.netapp.com/on-prem/ontap/Ontap\\_OS/OS-KBs/After\\_volumes\\_moved\\_aggregate\\_s...](https://kb-cn-stage.netapp.com/on-prem/ontap/Ontap_OS/OS-KBs/After_volumes_moved_aggregate_s...)

Updated: Wed, 22 Apr 2026 07:32:31 GMT

### 适用场景

ONTAP 9

### 问题描述

在节点停用过程中执行卷移动以退出聚合后、系统会在System Manager中观察到元数据和IOPS。