



无法访问集群交换机 IP

https://kb-cn-stage.netapp.com/on-prem/ontap/Ontap_OS/OS-KBs/Cluster_switch_IP_not_reachable

Updated: Wed, 22 Apr 2026 07:30:30 GMT

适用场景

- 集群交换机
- 管理交换机

问题描述

- 集群交换机显示IP Not Reachable

```
cn1610-sw2          cluster-network  x.x.x.x      CN1610
  Serial Number: xxxxxxxxxxxx
  Is Monitored: false
  Reason: IP address not reachable
  Software Version: 1.2.0.7
  Version Source: ISDP
```

- 尝试对交换机执行ping操作时显示丢弃的数据包

'NetApp provides no representations or warranties regarding the accuracy or reliability or serviceability of any information or recommendations provided in this publication or with respect to any results that may be obtained by the use of the information or observance of any recommendations provided herein. The information in this document is distributed AS IS and the use of this information or the implementation of any recommendations or techniques herein is a customers responsibility and depends on the customers ability to evaluate and integrate them into the customers operational environment. This document and the information

```
C:\Users\username>ping x.x.x.x
```

```
Pinging x.x.x.x with 32 bytes of data:
```

```
Request timed out.
```

```
Request timed out.
```

```
Request timed out.
```

```
Request timed out.
```

- 无法通过SSH连接到交换机。
- 报告管理端口脱机。
- 关闭并重新启动交换机不会恢复连接。
- 通过将连接到管理交换机的缆线移至其他端口、可以对集群交换机执行ping操作。