



如何确认集群互连的运行状况

https://kb-cn-stage.netapp.com/on-prem/ontap/Ontap_OS/OS-KBs/How_to_confirm_health_of_cluster_...

Updated: Wed, 22 Apr 2026 11:40:22 GMT

适用场景

- ONTAP 9
- 集群互连

问题描述

用于检查集群互连运行状况的命令

如果有理由认为集群互连运行不正常，我们预计会在 EMS 日志中看到有关集群中断 ping 或物理端口上收到硬件错误的警报

```
[Cluster-1a: vifmgr: vifmgr.cluscheck.ctdptloss:alert]: Continued packet loss when pinging from cluster lif Cluster-1a_clus1 (node Cluster-1a) to cluster lif Cluster-1b_clus1 (node Cluster-1b)
```