



---

## 如何禁用AutoSupport ?

[https://kb-cn-stage.netapp.com/on-prem/ontap/Ontap\\_OS/OS-KBs/How\\_to\\_disable\\_autosupport](https://kb-cn-stage.netapp.com/on-prem/ontap/Ontap_OS/OS-KBs/How_to_disable_autosupport)

Updated: Wed, 22 Apr 2026 04:06:52 GMT

### 适用场景

ONTAP 9

### 问题解答

#### 警告

NetApp建议为所有ONTAP集群启用AutoSupport。禁用AutoSupport将阻止NetApp提供Active IQ功能、例如主动式支持和预测性分析。例如、自动磁盘发货和主动风险缓解等功能将无法实现。

- 要禁用AutoSupport、请运行以下命令：

```
::> system node autosupport modify -state disable
```

---

'NetApp provides no representations or warranties regarding the accuracy or reliability or serviceability of any information or recommendations provided in this publication or with respect to any results that may be obtained by the use of the information or observance of any recommendations provided herein. The information in this document is distributed AS IS and the use of this information or the implementation of any recommendations or techniques herein is a customers responsibility and depends on the customers ability to evaluate and integrate them into the customers operational environment. This document and the information

## 追加信息

- [什么是AutoSupport On Demand?为什么要启用它?](#)
- [启用AutoSupport的https传输协议是否存在风险?](#)
- [NetApp 遥测数据的安全与隐私保护](#)
- [如何在System Manager的计划维护时段禁止自动创建案例](#)