



ONTAP 9 : 配置自动接管和高可用性

https://kb-cn-stage.netapp.com/on-prem/ontap/Ontap_OS/OS-KBs/ONTAP_9__Configuring_auto_take...

Updated: Wed, 22 Apr 2026 07:30:31 GMT

适用于

- ONTAP 9

解答

要了解如何配置自动接管和高可用性，请参见 [\[1\]](#) ONTAP 9 文档中心中的《高可用性配置指南》。

其他信息

要检查系统中当前设置的内容，可以对每个 HA 对执行以下命令：

```
storage failover show -instance
```

示例输出（截断）：

```
> Reason Takeover not Possible by Partner: -  
> Auto Giveback Enabled: true
```

'NetApp provides no representations or warranties regarding the accuracy or reliability or serviceability of any information or recommendations provided in this publication or with respect to any results that may be obtained by the use of the information or observance of any recommendations provided herein. The information in this document is distributed AS IS and the use of this information or the implementation of any recommendations or techniques herein is a customers responsibility and depends on the customers ability to evaluate and integrate them into the customers operational environment. This document and the information

```
> Takeover Detection Time (secs): 15
> Takeover on Panic Enabled: true
> Takeover on Reboot Enabled: true
> Delay Before Auto Giveback (secs): 600
> Hardware Assist Enabled: false
> Partner's Hwassist IP: -
```

[《高可用性配置指南》](#) 的完整 PDF 可从 [NetApp 文档中心](#) 下载。