



---

## vserver locks show 命令挂起

[https://kb-cn-stage.netapp.com/on-prem/ontap/Ontap\\_OS/OS-KBs/vserver\\_locks\\_show\\_command\\_ha...](https://kb-cn-stage.netapp.com/on-prem/ontap/Ontap_OS/OS-KBs/vserver_locks_show_command_ha...)

Updated: Wed, 22 Apr 2026 03:53:43 GMT

### 适用场景

ONTAP 9

### 问题描述

vserver locks show 命令挂起。