



---

## AutoSupport消息：SwitchTemperatureWarn\_Alert

[https://kb-cn-stage.netapp.com/on-prem/Switches/Cisco-KBs/AutoSupport\\_Message\\_\\_SwitchTemperat...](https://kb-cn-stage.netapp.com/on-prem/Switches/Cisco-KBs/AutoSupport_Message__SwitchTemperat...)

Updated: Wed, 22 Apr 2026 03:53:53 GMT

### 适用场景

- ONTAP 9
- Cisco 集群网络交换机

### 问题描述

- 当 超过交换机的传感器温度阈值时、将发送SwitchTemperatureWarn\_Alert警报。

```
[node-1: mgwd: callhome.hm.alert.minor:error]: Call home for Health Monitor  
process cshm: SwitchTemperatureWarn_Alert[cluster-sw01 (FDXXXXXXXXZD) /module-1  
BACK].
```

- 交换机日志指示当前温度超过阈值。

```
cluster-sw01# show environment
```

Temperature:

Module	Sensor	MajorThresh (Celsius)	MinorThres (Celsius)	CurTemp (Celsius)	Status
1	FRONT	80	70	44	Ok
1	BACK	70	42	44	<b>MinorAlarm</b>
1	CPU	90	80	58	Ok
1	Heavenly	110	90	66	Ok

- `SwitchTemperatureCritical_Alert AutoSupport` 警报可能也会与此问题描述一起显示。
- 如果交换机温度持续超过温度阈值、则交换机可能会关闭