



---

## 初始化Cisco Nexus 3132Q-V交换机后出现集群互连可访问性问题

[https://kb-cn-stage.netapp.com/on-prem/Switches/Cisco-KBs/Cluster\\_interconnect\\_reachability\\_issues...](https://kb-cn-stage.netapp.com/on-prem/Switches/Cisco-KBs/Cluster_interconnect_reachability_issues...)

Updated: Wed, 22 Apr 2026 09:01:34 GMT

### 适用场景

Cisco Nexus 3132Q-V

### 问题描述

在初始安装或更换Cisco Nexus 3132Q-V交换机后、必须在两个交换机之间遍历的端口之间的第2层可访问性将失败。

- 使用[cluster ping](#)集群命令：

```
cluster1::> set -privilege advanced
```

```
Warning: These advanced commands are potentially dangerous; use them only when  
directed to do so by NetApp personnel.
```

```
Do you want to continue? {y|n}: y
```

```
cluster1::*> cluster ping-cluster -node cluster1-01
```

```
Host is cluster1-01
```

---

'NetApp provides no representations or warranties regarding the accuracy or reliability or serviceability of any information or recommendations provided in this publication or with respect to any results that may be obtained by the use of the information or observance of any recommendations provided herein. The information in this document is distributed AS IS and the use of this information or the implementation of any recommendations or techniques herein is a customers responsibility and depends on the customers ability to evaluate and integrate them into the customers operational environment. This document and the information

Getting addresses from network interface table...

Ping status:

....

Basic connectivity succeeds on 2 path(s)

Basic connectivity fails on 2 path(s)

- 使用 [network port reachability show](#) command :

```
cluster1::> network port reachability show -expected-broadcast-domain
```

```
Cluster:Cluster
```

Node	Port	Expected Reachability	Reachability Status
-----			
cluster1-01			
	e0e	Cluster:Cluster	ok
	e0f	Cluster:Cluster	no-reachability