



Broadcom BES-53248交换机无法启动、即使在重新启动后也是如此

https://kb-cn-stage.netapp.com/on-prem/Switches/Broadcom-KBs/Broadcom_BES_53248_switch_not_...

Updated: Wed, 22 Apr 2026 08:47:52 GMT

适用场景

- Broadcom BES-53248 交换机

问题描述

- 交换机未启动。从最后一个控制台日志中、我们可以看到以下内容：

```
[79952817.255960]
blk_update_request: I/O error, dev sda, sector 796936
[79952817.263167] blk_update_request: I/O error, dev sda, sector
796960
[79952817.270482] blk_update_request: I/O error, dev sda, sector 796944
[79952817.278061] EXT4-fs error (device sda3):
__ext4_get_inode_loc:4124: inode #20: block 1058: comm emWeb: unable to read
itable block
```

```
[79952817.291539] EXT4-fs (sda3):
previous I/O error to superblock detected
[79952817.299208] blk_update_request: I/O error, dev sda, sector 788480
[79952817.306344]
blk_update_request: I/O error, dev sda, sector 788480
[79952817.313458] Buffer I/O error on dev sda3, logical block 0, lost sync
page write
May 24 13:07:55 ldnectinasf02sw2-1 General[emWeb]: usmdb_sim.c(4021) 279588 %%
CRIT Event(0x0)
value = 0 =
0x0
```

```
Reference platform resetting ...
starting pid 31979, tty '': '/etc/rc.d/rc.reboot'
```

```
syncing filesystems....This may take a few
moments
```

```
Rebooting system!
```

```
Sent SIGKILL to all processes
```

```
Requesting system reboot
```

```
[79952824.129088] reboot: Restarting system
```

```
BIOS
```

```
3A07.SN POST starts...
```

```
CPU: Intel(R) Atom(TM) CPU C2338 @ 1.74GHz Speed: 1743MHz
```

```
Total
```

```
Memory: 4096MB DDR3-1333MHz
```

```
USB Devices total: 0 KBDs, 0 MICE, 0 MASS, 2 HUBs
```

```
Version 2.17.1245. Copyright (C) 2019 American Megatrends, Inc.
```

```
BIOS Date: 12/30/2019
```

```
18:58:51 Ver: 3A07.SN
```

```
Press <DEL> or to enter setup.
```

```
Press <F11> for BBS POPUP menu.
```

```
Press <F12> if you want to boot from the
network
```

```
Press <ESC> to skip...0
```