



## 在未重新启动的情况下进行热插拔后、无法识别Brocade交换机PSU

[https://kb-cn-stage.netapp.com/on-prem/Switches/Broadcom-KBs/Brocade\\_switch\\_PSU\\_not\\_recogniz...](https://kb-cn-stage.netapp.com/on-prem/Switches/Broadcom-KBs/Brocade_switch_PSU_not_recogniz...)

Updated: Wed, 22 Apr 2026 07:30:30 GMT

### 适用场景

- Brocade (G620)
- 电源设备(PSU)

### 问题描述

将交换机PSU更换为新的PSU后、此PSU仍显示为故障：

示例：

```
psshow -v      :
```

```
Power Supply #1 is OK
```

```
Power Supply #2 is faulty
```

```
fanshow      :
```

```
Fan 1 is Ok, speed is 8341 RPM
```

'NetApp provides no representations or warranties regarding the accuracy or reliability or serviceability of any information or recommendations provided in this publication or with respect to any results that may be obtained by the use of the information or observance of any recommendations provided herein. The information in this document is distributed AS IS and the use of this information or the implementation of any recommendations or techniques herein is a customers responsibility and depends on the customers ability to evaluate and integrate them into the customers operational environment. This document and the information

Fan 2 is Ok, speed is 8553 RPM