



---

## Brocade FC交换机需要重新启动才能设置时区

[https://kb-cn-stage.netapp.com/on-prem/Switches/Brocade-KBs/Brocade\\_FC\\_switch\\_needs\\_reboot\\_to...](https://kb-cn-stage.netapp.com/on-prem/Switches/Brocade-KBs/Brocade_FC_switch_needs_reboot_to...)

Updated: Wed, 22 Apr 2026 07:32:28 GMT

### 适用场景

Brocade FC 交换机

### 问题描述

[1] 使用 `tsclockserver` 和 `tstimezone` 交换机命令行界面更改交换机时区并设置NTP源时、需要重新启动。

示例：

```
System Time Zone change will take effect at next reboot. On Chassis, reboot both CPs simultaneously
```