



---

## Brocade G620 交换机显示为挂起

[https://kb-cn-stage.netapp.com/on-prem/Switches/Brocade-KBs/Brocade\\_G620\\_switch\\_appears\\_hung](https://kb-cn-stage.netapp.com/on-prem/Switches/Brocade-KBs/Brocade_G620_switch_appears_hung)

Updated: Wed, 22 Apr 2026 07:30:09 GMT

### 适用场景

- Brocade (G620)
- 网络结构操作系统：V 8.2.1b

### 问题描述

内核跟踪模块损坏导致交换机崩溃。导致交换机处于挂起状态

