



---

## Brocade G720 交换机未通电

[https://kb-cn-stage.netapp.com/on-prem/Switches/Brocade-KBs/Brocade\\_G720\\_switch\\_not\\_powering\\_on](https://kb-cn-stage.netapp.com/on-prem/Switches/Brocade-KBs/Brocade_G720_switch_not_powering_on)

Updated: Wed, 22 Apr 2026 07:30:03 GMT

### 适用场景

Brocade G720

### 问题描述

- Brocade G720 交换机未通电
- 按顺序连接交换机不会显示任何输出
- 指示灯不闪烁
- 可以执行以下步骤：
  - 按序列连接交换机、然后重新启动交换机
  - 将电源线更换为已知良好的电源线
  - 将电源线连接到另一个PDU
  - 检查是否有任何指示灯闪烁
- 如果上述步骤没有响应，请继续执行解决方案

---

'NetApp provides no representations or warranties regarding the accuracy or reliability or serviceability of any information or recommendations provided in this publication or with respect to any results that may be obtained by the use of the information or observance of any recommendations provided herein. The information in this document is distributed AS IS and the use of this information or the implementation of any recommendations or techniques herein is a customers responsibility and depends on the customers ability to evaluate and integrate them into the customers operational environment. This document and the information