



---

## Brocade交换机已关闭、无法启动

[https://kb-cn-stage.netapp.com/on-prem/Switches/Brocade-KBs/Brocade\\_switch\\_is\\_down\\_and\\_does\\_...](https://kb-cn-stage.netapp.com/on-prem/Switches/Brocade-KBs/Brocade_switch_is_down_and_does_...)

Updated: Wed, 22 Apr 2026 11:39:21 GMT

### 适用场景

- 所有Brocade硬件平台
- 所有Brocade Fabric OS固件版本

### 问题描述

- 无法访问Brocade前端SAN交换机、并且关联路径已关闭
- 所有指示灯均亮起、并且开机自检(POST)未完成
- 交换机在内存初始化时启动环路失败、无法重置系统