



如何使用 USB 设备升级 Brocade FC 交换机固件

https://kb-cn-stage.netapp.com/on-prem/Switches/Brocade-KBs/How_to_upgrade_Brocade_FC_switch...

Updated: Wed, 22 Apr 2026 11:58:01 GMT

适用于

Brocade 交换机

说明

The [标准 Brocade 固件升级程序](#)需要 SFTP 或 SCP 服务器（或在较新的固件版本中需要 HTTP 服务器）来执行升级。Brocade 还支持使用 USB 闪存设备进行升级。

'NetApp provides no representations or warranties regarding the accuracy or reliability or serviceability of any information or recommendations provided in this publication or with respect to any results that may be obtained by the use of the information or observance of any recommendations provided herein. The information in this document is distributed AS IS and the use of this information or the implementation of any recommendations or techniques herein is a customers responsibility and depends on the customers ability to evaluate and integrate them into the customers operational environment. This document and the information