



---

## 如何更改CN1610交换机上的密码

[https://kb-cn-stage.netapp.com/on-prem/Switches/NetApp-KBs/How\\_to\\_change\\_password\\_on\\_CN161...](https://kb-cn-stage.netapp.com/on-prem/Switches/NetApp-KBs/How_to_change_password_on_CN161...)

Updated: Wed, 22 Apr 2026 08:33:51 GMT

### 适用场景

- CN1610

### 问题描述

本文介绍在集群互连交换机上更改密码时应遵循的操作步骤