



如何检查性能层的使用情况

https://kb-cn-stage.netapp.com/on-prem/ontap/dm/FabricPool/FabricPool-KBs/How_to_check_usage_o...

Updated: Wed, 22 Apr 2026 07:32:34 GMT

适用场景

- ONTAP 9

问题解答

请使用以下命令检查性能层的使用情况。

- 卷信息

要确定性能层的数量、请使用 [volume show-Footprint](#) 命令、如下所示：

```
::> volume show-footprint vol21
```

```
Vserver : svm1
Volume  : vol21
eature                                     Used      Used%
-----
```

Volume Data Footprint	9.49GB	0%
Footprint in Performance Tier	1.66GB	17%
Footprint in sgws01	7.83GB	83%
Volume Guarantee	0B	0%
Flexible Volume Metadata	105.0MB	0%
Deduplication	38.86MB	0%
Cross Volume Deduplication	90.48MB	0%
Delayed Frees	7.62MB	0%
Total Footprint	9.72GB	0%

- 聚合信息

[storage 聚合 show-space](#) 命令：

```
::> storage aggregate show-space aggr2
```

```
Aggregate : aggr2
Performance Tier
Feature                               Used           Used%
-----
Volume Footprints                     725.7MB        0%
Aggregate Metadata                    409.5MB        0%
Snapshot Reserve                      0B             0%
Total Used                            1.11GB         0%
Total Physical Used                   20.18GB        1%

Aggregate : aggr2
Object Store: sgws01
Feature                               Used           Used%
-----
Referenced Capacity                   18.82GB        -
Metadata                              0B             -
Unreclaimed Space                     0B             -
Space Saved by Storage Efficiency      33.79MB        -
Total Physical Used                   18.79GB        -
```

追加信息

其他信息文本