



# CXone Mpower EXPERT

---

## 动态磁盘显示为 " 外部 "

[https://kb-cn-stage.netapp.com/on-prem/ontap/da/SAN/SAN-KBs/Dynamic\\_disks\\_showing\\_up\\_as\\_forei...](https://kb-cn-stage.netapp.com/on-prem/ontap/da/SAN/SAN-KBs/Dynamic_disks_showing_up_as_forei...)

Updated: Wed, 22 Apr 2026 07:31:51 GMT

### 适用场景

- 7-模式过渡工具 (7MTT)。
- Windows
- SAN

### 问题描述

预转换后，动态磁盘在主机端显示为 " 外部 "